
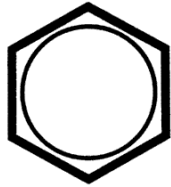
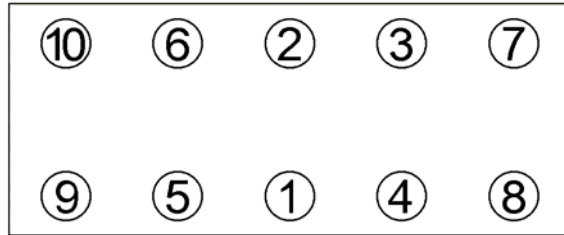



<b>Anziehvorschrift für Zylinderkopf</b>	<b>828.254</b> passend für / suitable for adaptable à / adaptable a <b>Mazda</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo








707.650  
M 12 x 107



Anziehen/  20 - 26 Nm  
Tightening/ 50 - 56 Nm  
Serrage/ 80 - 86 Nm  
Apriete

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflorar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

87,5 mm Ø

Mot. F8 1,8 l 66 kW (90 PS)

FE 2,0 l 79 kW (107 PS)

F2 2,2 l 85 kW (115 PS)

626 GD, 626 Wagon GV

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*828.254\***