
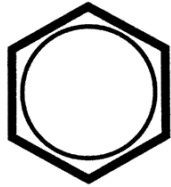
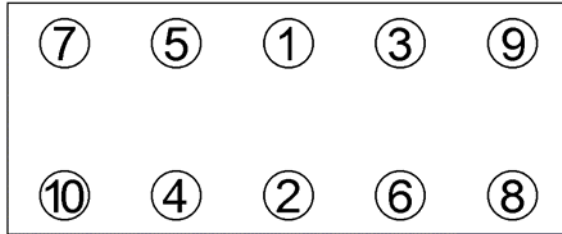






Anziehvorschrift für Zylinderkopf	919.942 passend für / suitable for adaptable à / adaptable a Ford	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



802.940
7/16 - 135



Anziehen/  20 - 30 Nm
Tightening/  76 - 92 Nm
Serrage/  3 min
Apriete  90°

Zeichenerklärung / Explanations / Explication / Explicacion

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

Ø: 83,8; $\frac{1}{2}$: 1,36 mm 2 Zähne/teeth/dents

Mot. RFA;RFB;RFD;RFK;RFL;RTA;RTB;RTC;RTD

RTE;RTF;RTG;RTH

1,8 ltr. 43-66 KW (58-90 PS)

Fiesta, Escort, Orion, Sierra →1992

ElringKlinger AG, Max-Eyth-Str.2
72581 Dettingen / Erms. Tel. 07123/724 601

919.942