


Anziehvorschrift für Zylinderkopf	864.100		
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
	passend für / suitable for adaptable à / adaptable a	Honda	Das Original

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



706.150

M 12 x 163/199

Anziehen/ Tightening/ Serrage/ Apriete	Mot. F18A../F20A.. Mot. F22A..	Mot. F20Z...
☼	40 Nm 70 Nm 108 Nm	☼ 40 Nm 70 Nm 100 Nm

Zeichenerklärung / Explanations / Explication / Explicacion

☼	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

∅: 85,9 mm; ɸ: 1,20 mm

Mot: F18A2, F18A3, F20A2, F20A4, F20A6, F20A7
F20A8, F20Z1, F20Z2, F20Z3, F22A3, F22A7
F22A8, F 18 A3, F 20 Z1, F 20 Z2

1,8 ltr-2,2 ltr
Accord IV-VI, Prelude IV-V, Rover 600