
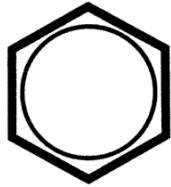
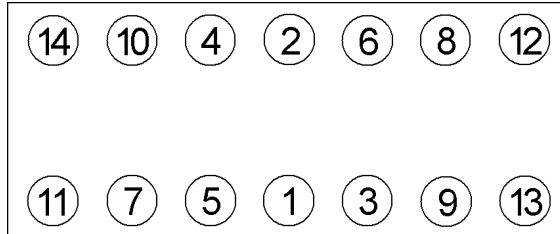




<b>Anziehvorschrift für Zylinderkopf</b>	<b>750.492</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		
	passend für / suitable for adaptable à / adaptable a	<b>BMW</b>

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



802.700  
M 12 x 157



Anziehen/  58 - 62 Nm  
Tightening/  25 min  
Serrage/ \* 78 - 82 Nm  
Apriete \* 80°C  
➤ 30° - 40°

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Mot. M30 B35, 3430cm<sup>3</sup>

E28 528i, 535i, M535i

E24 635CSi 05/1982→06/1987

E23 735i 09/1982→, 745i →05/1983

E34 535i

E32 735i, iL

∅ 93,5 mm  $\pm$  2,07mm (+0,3)

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*750.492\***