
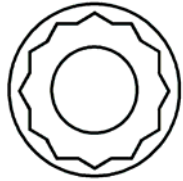
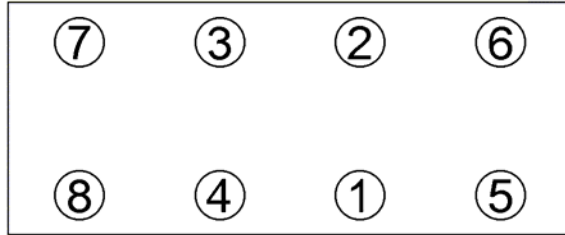


Anziehvorschrift für Zylinderkopf	325.600	 Das Original
Tightening Instructions for Cylinder Head		
Instructions de serrage pour culasse		
Prescripciones de apriete para culatas		
	passend für / suitable for adaptable à / adaptable a	Opel

Schraubenkopf / Head shape Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete
Tête de vis / Cabeza de tornillo



273.150
M12x146/175



- | | | |
|-------------|---|-------------|
| Anziehen/ | | M12x146x1,5 |
| Tightening/ | ☼ | 39 Nm |
| Serrage/ | ➤ | 110° |
| Apriete | ➤ | 110° |
| | | |
| | | M12x175x1,5 |
| | ☼ | 39 Nm |
| | ➤ | 130° |
| | ➤ | 130° |

Zeichenerklärung / Explanations / Explication / Explicacion

☼	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

Motortyp / Engine type / Type de moteur / Tipo de motor

0,65 mm / 2 holes / right side

Y30DT 3,0 ltr. CDTi V6 Diesel
Signum, Vectra C