
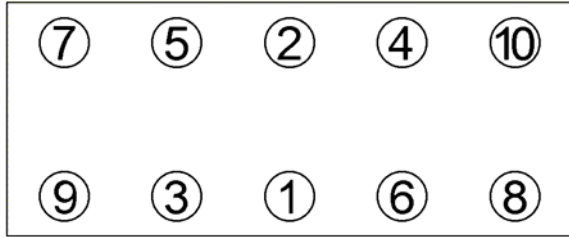








<b>Anziehvorschrift für Zylinderkopf</b>	<b>069.330</b> passend für / suitable for adaptable à / adaptable a  <b>Daihatsu</b>	 <b>Das Original</b>
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



Anziehen/  19-27 Nm  
Tightening/ 39-47 Nm  
Serrage/ 59-67 Nm  
Apriete

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 77,0 mm;  $\frac{1}{2}$ : 1,35 mm

Mot: HD, HDC, HD-E, HDEP, HEE, HEEG, HE-EJ

1,3 ltr.-1,6 ltr.  
61-77 kW (83-105 PS)

Applause I-II, Charade IV, Feroza, GranMove, Terios