
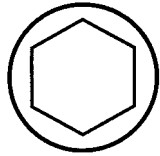
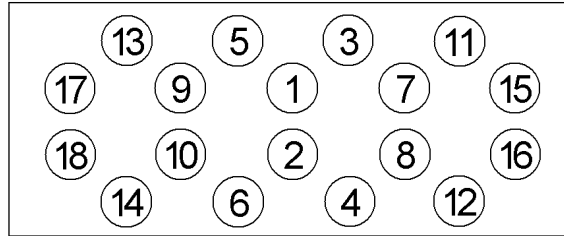



<b>Anziehvorschrift für Zylinderkopf</b>	<b>026.400</b> passend für / suitable for adaptable à / adaptable a  <b>Mitsubishi</b>	 <b>Das Original</b>
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



709.310  
M 12 x 104



Anziehen/  40-50 Nm  
Tightening/ 70-80 Nm  
Serrage/ 105-115 Nm  
Apriete

**Zeichenerklärung / Explanations / Explication / Explicacion**

	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	afojar y apretar tornillo a tornillo
	Setzzeit	relaxation time	durée de tassement	tiempo de espera
	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

Ø: 92,5mm;  $\frac{1}{2}$ : 1,40mm

Mot: 4D56, 4D56T

2,3 ltr.-2,5 ltr.  
50-62 kW (68-84 PS)

Galant II, L200, L300, Pajero I

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*026.400\***