
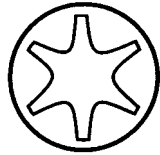
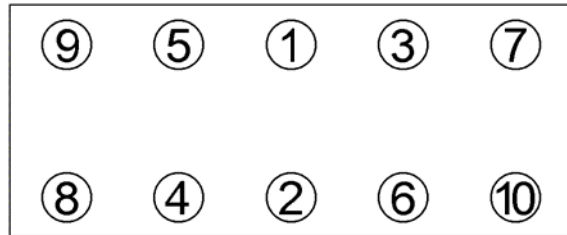


<b>Anziehvorschrift für Zylinderkopf</b>	<b>027.860</b> passend für / suitable for adaptable à / adaptable a <b>Ford</b>	 Das Original
<b>Tightening Instructions for Cylinder Head</b>		
<b>Instructions de serrage pour culasse</b>		
<b>Prescripciones de apriete para culatas</b>		

Schraubenkopf / Head shape      Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete  
Tête de vis / Cabeza de tornillo



802.900  
M 11 x 173



Anziehen/	☼	40 Nm	M8: 20 Nm
Tightening/		55 Nm	38 Nm
Serrage/	➤	90°	
Apriete	➤	90°	

Zeichenerklärung / Explanations / Explication / Explicacion

☼	neue Zylinderkopfschrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
*	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflorar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro

**Motortyp / Engine type / Type de moteur / Tipo de motor**

∅ 87,5 mm;  $\frac{\pm}{\text{mm}}$ : 1,58 mm

Mot: N8A;N8B;N8C;N8D;N9E;N9F;NSD;NSF;NSG

NSH

2,0 ltr. DOHC 70-92 KW (104-125 PS)

Granada 5/89→5/94;Sierra/Scorpio 1/89→5/94

Scorpio 10/94→7/98;Transit8/94→7/00

ElringKlinger AG, Max-Eyth-Str.2  
72581 Dettingen / Erms. Tel. 07123/724 601

**\*027.860\***